

Parts List — SR5017

Part Number	Description	Config Step	Qty
250876	MANUAL, OPERATORS – SR - STAGE 1	Configuration Type	1
417000	BDL, SINGLE RANK SR6015	Tank Configuration	1
270225	SCALE, DIGITAL - HANDHELD	Tank Configuration	1
419095-1	BDL, RESIDUE WHEEL - SPLIT BUSHI 6015 SR - STAGE 3	Tank Configuration	1
419096	BDL, OPENER HOSE HOLDERS SB - SR	Tank Configuration	1
419093	BDL, OPENERS - SR6015 - INLINE	Opener Configuration	1
400678	BDL, SEED KNIFE IL OFFSET RIGHT - SR	Opener Configuration	48
400679	BDL, SEED KNIFE PAIRED ROW - SR	Opener Configuration	48
400529	BDL, FERT KNIFE SR	Fertilizer Knife Option	48
270132	KIT, IN-CAB - VIPER 4+ - No GPS	Raven Monitor	1
270155	CODE, UNLOCK VIPER 4 COMBO VRA (SINGLE+MULTI)	VRA Unlock Code	1
451144-1	BDL, SEEDBDL, SEEDMASTER, REMOTE TANK MONITOR - STAGE 2	Remote Tank Monitor	1
417056-1	CTN, HYD - FRONT HITCH EXTENSION KIT - SR15	Front Hitch Hose Extensions	1
419400	BDL, HITCH - REAR - SR15 - STAGE 1	Rear Hitch Option	1